

Stay up-to-date by downloading the latest software for your equipment.

By downloading this update, you are agreeing to the Terms & Conditions set forth by Miller Electric Mfg. LLC.

Your right to use this software is conditioned on compliance with the EULA.


1. Setting The Static IP Address

The following procedure uses File Explorer in Microsoft Windows 10. Steps for other operating systems may be different.


- 1 Connect one end of the Ethernet cable to the Ethernet port on the back of the OptX 2kW.




- 2 Connect the other end of the Ethernet cable to your USB to Ethernet adapter or Ethernet Port.
- 3 Open **Settings** on your computer.

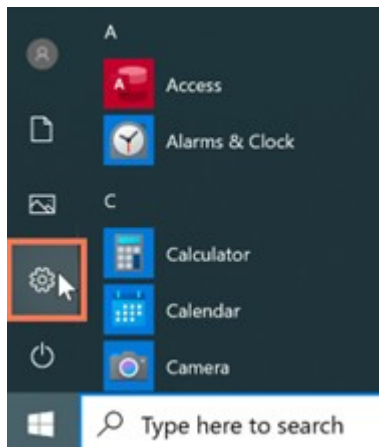


4 Click **Network & Internet**.

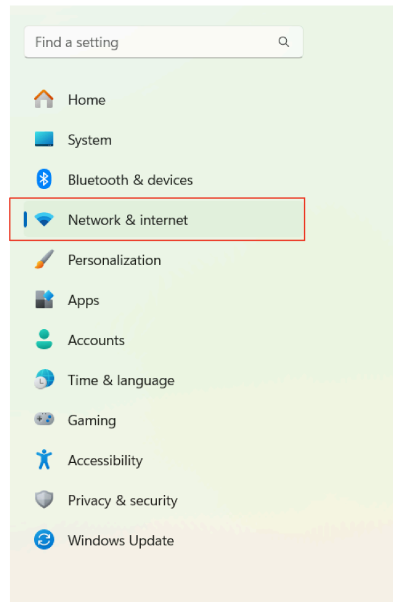


5 Double click **Ethernet**.

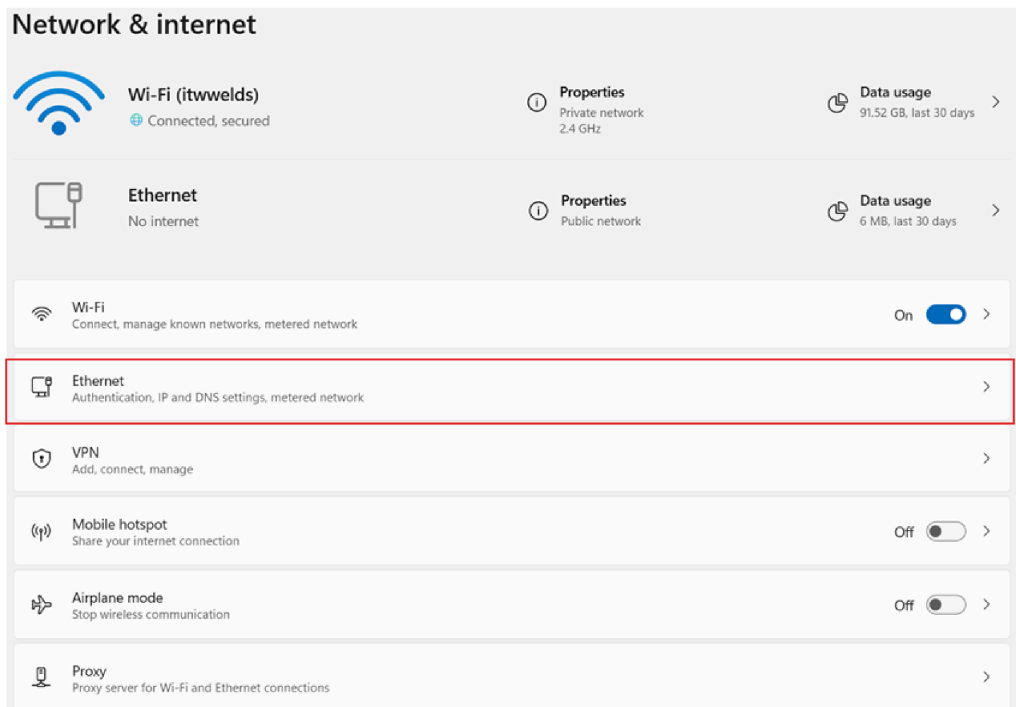


6 Next to **IP Assignment**, click **Edit**.

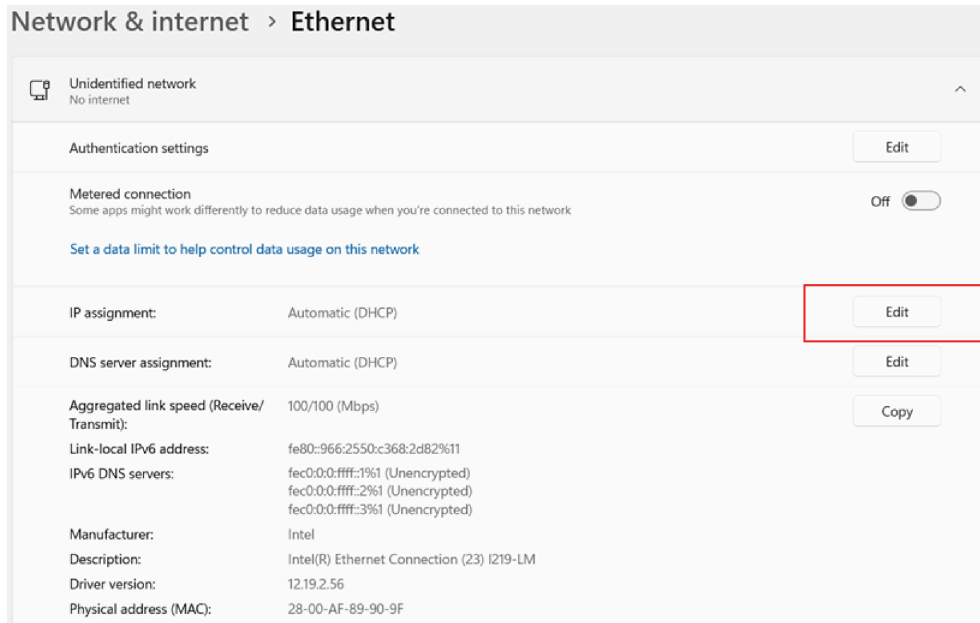

7 Change the IP Setting to **Manual**.

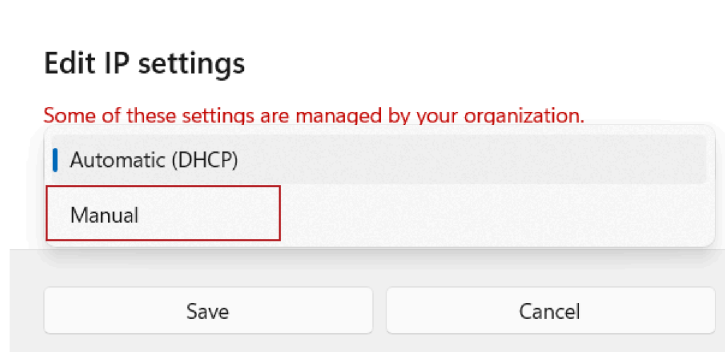

8 Click the **IPv4** slider button to turn it on.

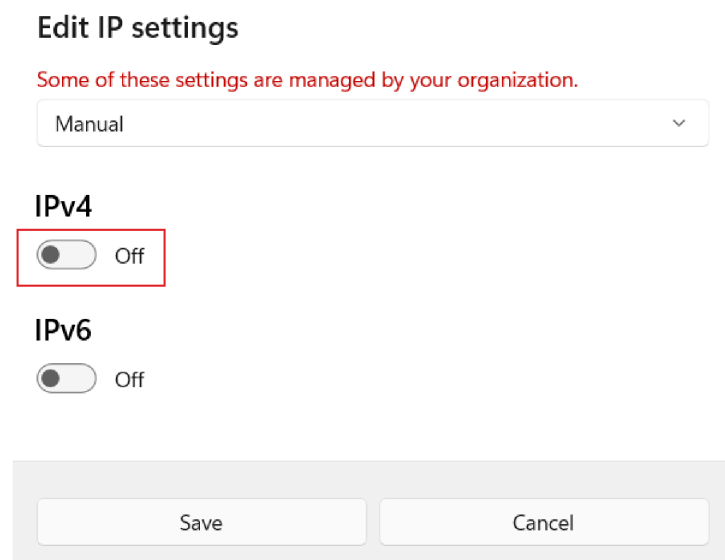

9 Enter **10.0.0.1** for IP address. Enter **255.255.255.0** for Subnet Mask. Click **Save**.

Edit IP settings

Some of these settings are managed by your organization.

Manual

IPv4

On

IP address
10.0.0.1

Subnet mask
255.255.255.0

Gateway


Preferred DNS

DNS over HTTPS
Off


Save Cancel

2. Loading Software Onto The OptX 2kW


- 1 Download the software and save it onto your computer.
- 2 Right click on the zip file and select extract all.

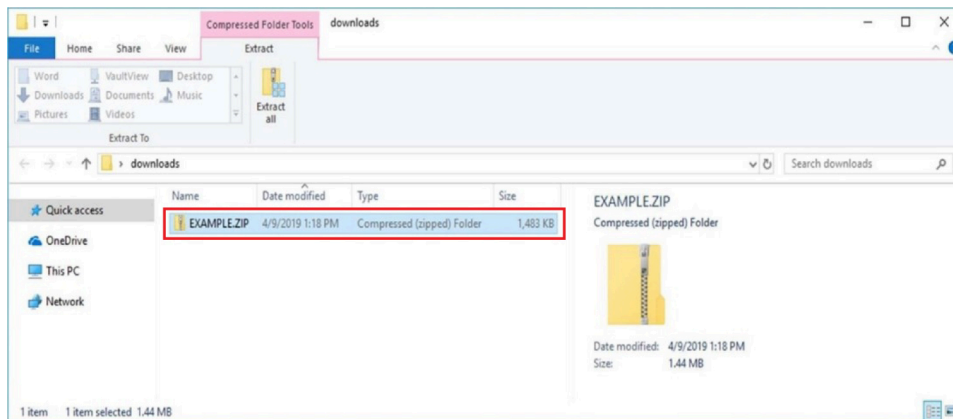


3 The **Select a Destination and Extract Files** window will open. Click **Browse**.

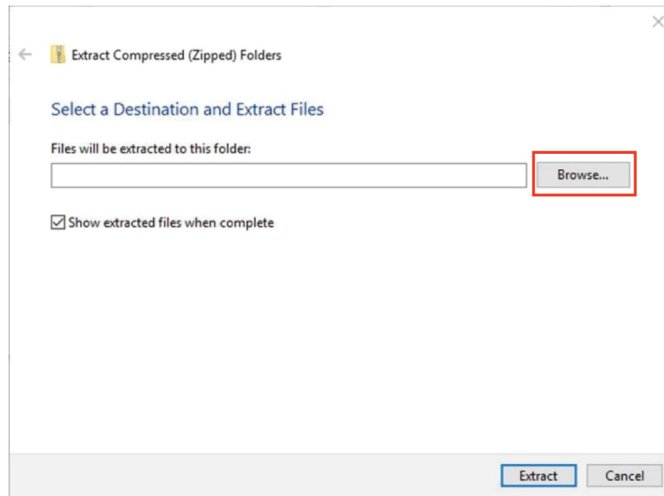

4 The **Select a Destination** window will open. Select **Desktop** as the place to save the unzipped folder.

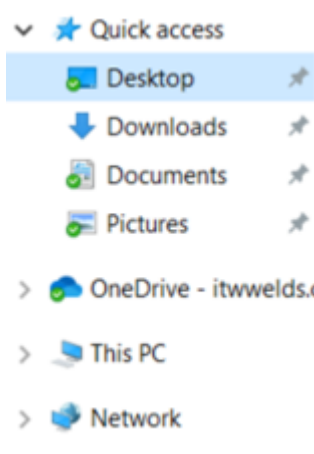


5 Double click the extracted software folder

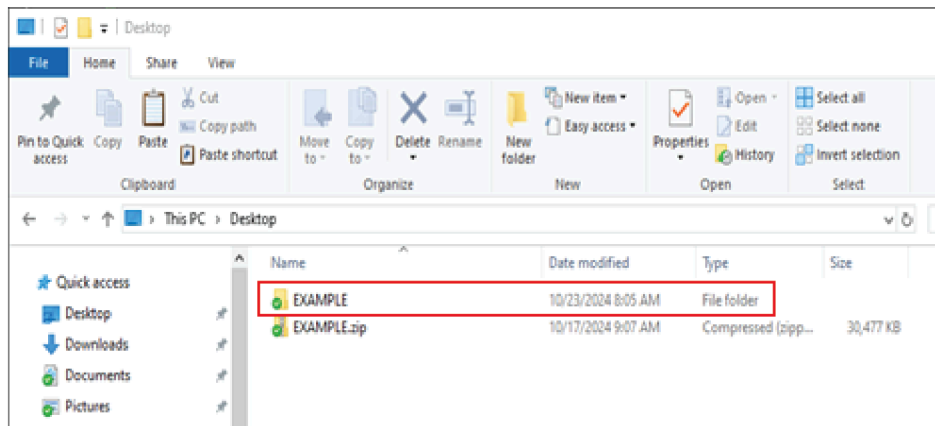


6 Double click the **Update.bat** file.

Name	Date modified	Type	Size
bin	10/23/2024 5:57 AM	File folder	
ReadMe.txt	12/6/2023 9:10 AM	Text Document	3 KB
suiteconfig.exe	1/11/2024 3:26 PM	Application	10,712 KB
Update.bat	12/6/2023 9:10 AM	Windows Batch File	1 KB

7 Depending on network settings, a prompt may appear asking for permission. Click **Yes**.

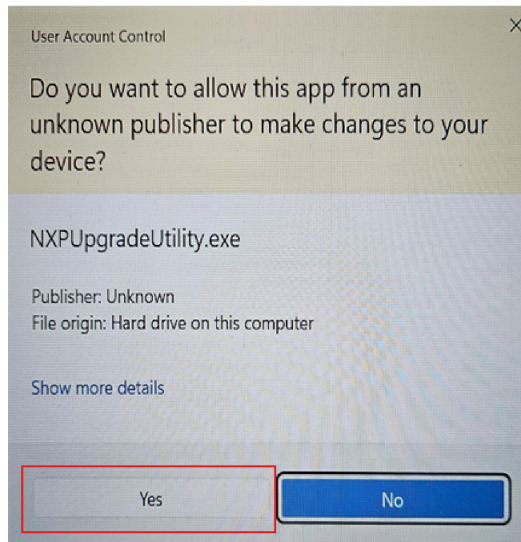

8 The machine will turn the display on and off multiple times throughout the update process. This may take several minutes. When the update is complete, the status bar will be solid green.

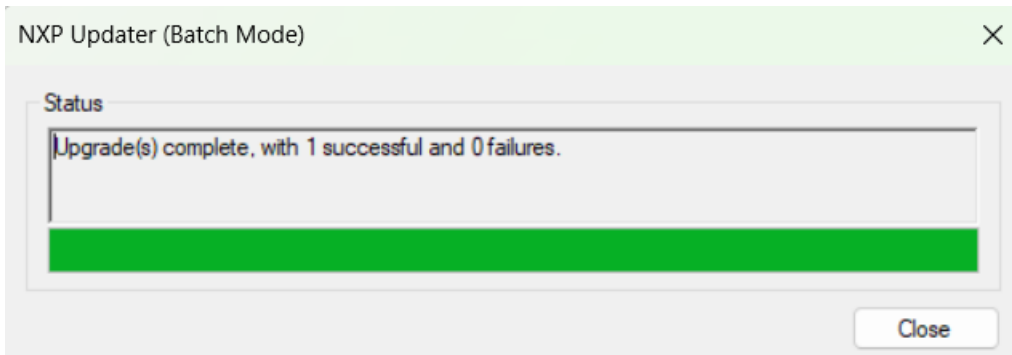

9 When the update has been completed, cycle power on the machine by turning the key to the Off position, waiting 15 seconds, and turning it back to the On position.

