

# Spark Your Project

## How to MIG Weld a Dutch Oven Trivet

### Tools & Materials Needed:

- Hobart® Handler® 125 MIG Welder
- 3 – Horseshoes
- 3 – 1/2" x 2-1/2" Round stock




### Steps:



**STEP 1**  
Place horseshoes so that the three tops of the horseshoes are in contact.



**STEP 2**  
Tack and weld horseshoes together where they meet.

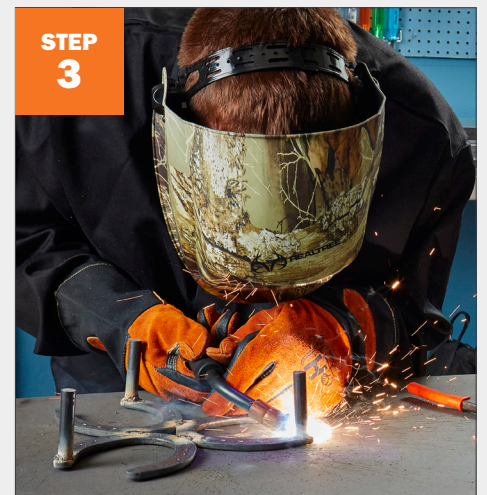

**STEP 3**  
Tack and weld the three stands on every-other end of the horseshoes.

**Full Video:** <https://youtu.be/5Cif8pZeA4c>

For more project ideas visit **HOBARTWELDERS.COM**

